



Dell Alienware M11x R3 Battery Replacement

Written By: Richard Maurice






TOOLS:

- [JIS #1](#) (1)
-

Step 1 — Lower Case

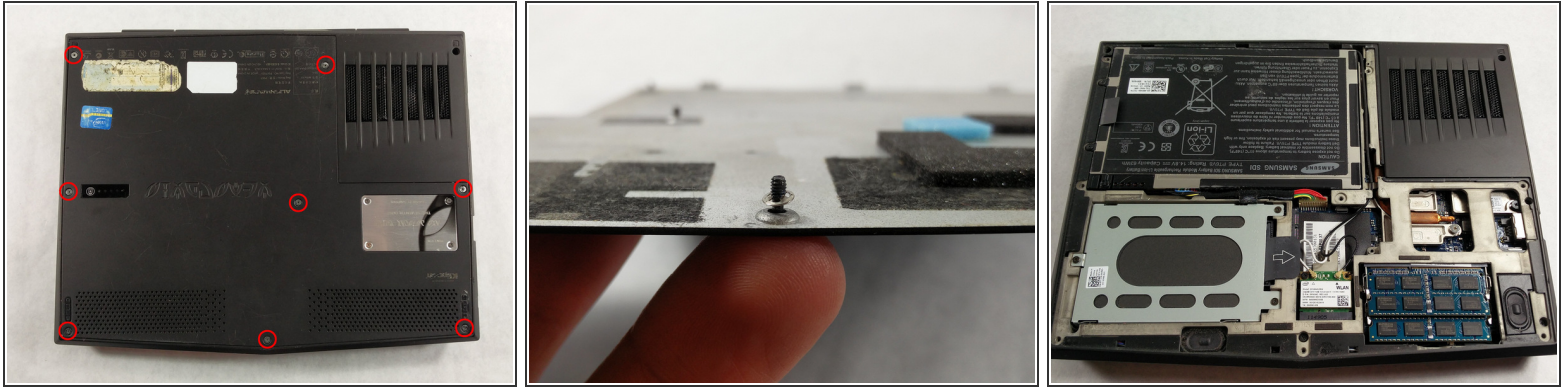


- Loosen the 8 retaining screws on the base of the computer.
- ⓘ The screws have retaining washers to hold them in place, so they won't actually separate from the base plate.
- Remove the bottom cover from the laptop.

Step 2 — Battery



- Unscrew the two circled screws

Step 3

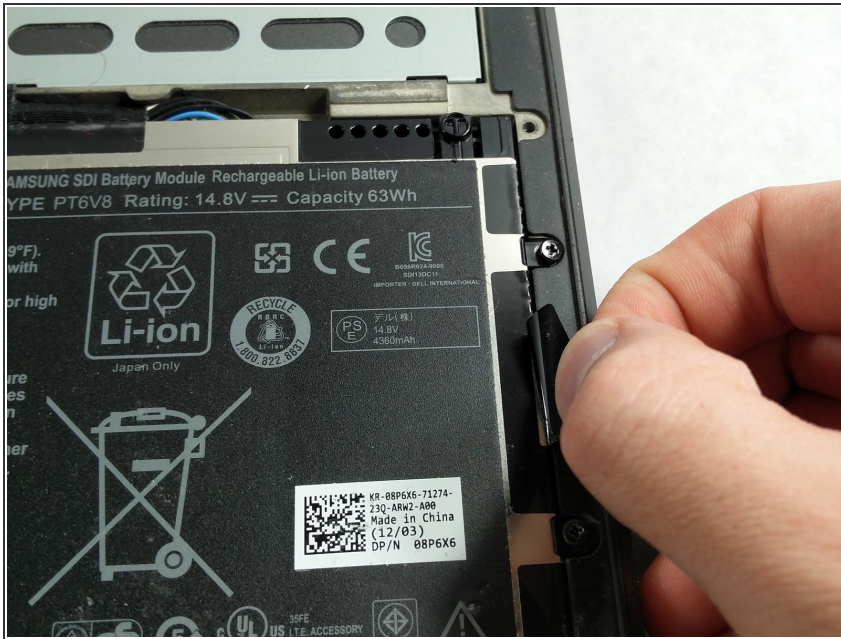


- After unscrewing, **gently** lift up the battery with the small plastic tab attached.

Step 4



- Do not try to fully remove the battery as there is a wire still connected, but lift it out of its casing.

Step 5

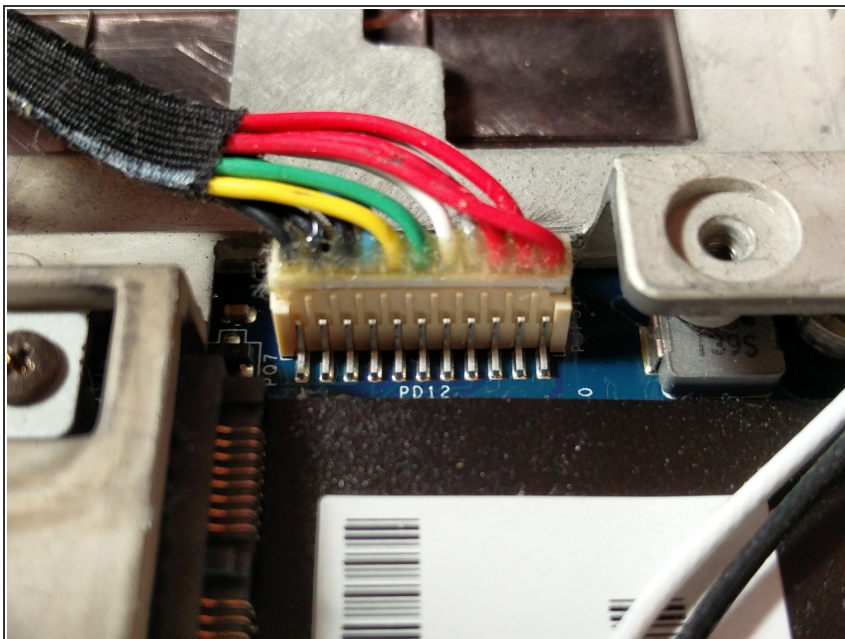

- Behind the battery, locate this PD12 battery wire and gently unplug it.

Step 6



- With the wire unplugged, and all of the screws taken out, you are free to remove the battery for replacement!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 03:04:20 PM.